
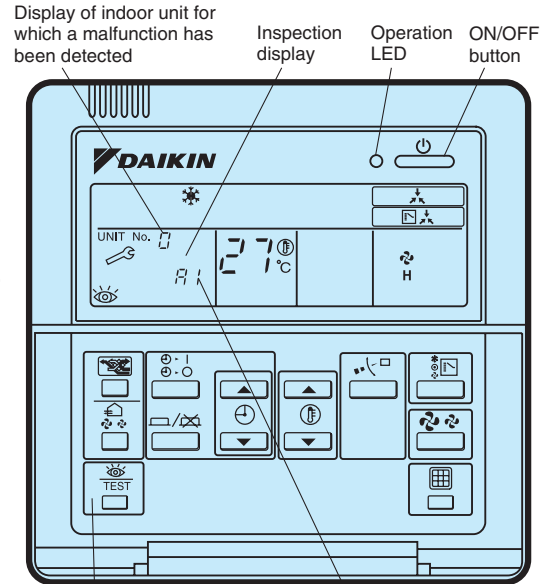


Self-Diagnosis by Remote Controller (SkyAir, VRV)

<Wired Remote Controller>

In case of BRC1C62



- If operation stops due to malfunction, the remote controller's operation LED blinks, and malfunction code is displayed.
- Even if stop operation is carried out, malfunction contents are displayed when the inspection mode is entered.
 - * While in check mode, pressing and holding the ON/OFF button for a period of four seconds or more will clear the malfunction history. (The malfunction code will blink, and the operation mode will switch from check mode to normal mode.)

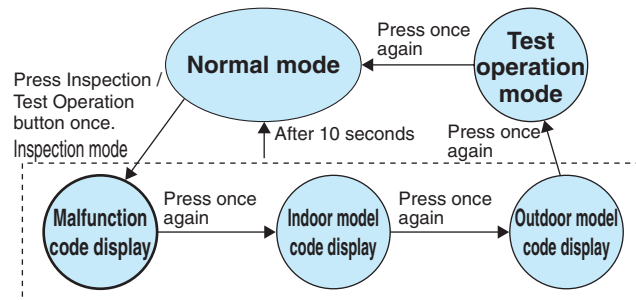

Inspection/Test button Malfunction code
* Location of buttons is depend on model type.

In case of BRC1E61

- If operation stops due to malfunction, the remote controller's operation indicator blinks. The message "Error: Press Menu Button" will appear at the bottom of the screen.
- Press "Menu/Enter" button, malfunction code will be displayed.
 - * Press "Menu/Enter" button, malfunction history is displayed in "Main Menu" mode.

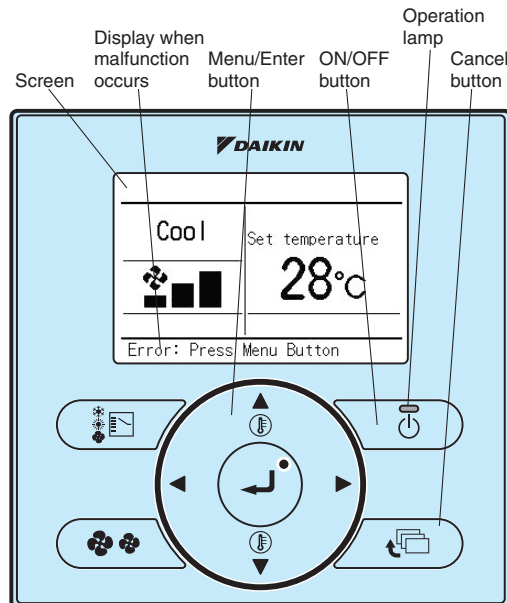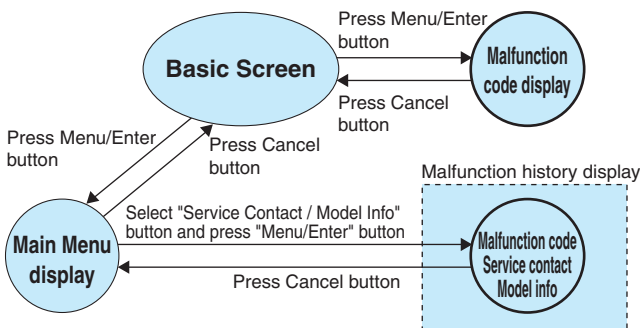

* While in malfunction code display mode on the left, pressing "ON/OFF" button for a period of four seconds or more will clear the malfunction history.

<Wireless Remote Controller>

- If equipment stops due to a malfunction, the operation indicating LED on the light reception section flashes.
- The malfunction code can be determined by following the procedure described below.

- Press the INSPECTION/TEST button to select "Inspection." The equipment enters the inspection mode. The "Unit" indication lights and the Unit No. display shows flashing "?" indication.
- Set the Unit No. Press the UP or DOWN button and change the Unit No. display until the buzzer (*1) is generated from the indoor unit.
 - *1 Number of beeps

3 short beeps : Conduct all of the following operations.
1 short beep : Conduct steps 3 and 4. Continue the operation in step 4 until a buzzer remains ON. The continuous buzzer indicates that the malfunction code is confirmed.

Continuous beep : No abnormality.


 
- Press the MODE selector button. The left "?" (upper digit) indication of the malfunction code flashes.

- Malfunction code upper digit diagnosis Press the UP or DOWN button and change the malfunction code upper digit until the malfunction code matching buzzer (*2) is generated.
 - The upper digit of the code changes as shown below when the UP and DOWN buttons are pressed.



*2 Number of beeps
Continuous beep : Both upper and lower digits matched. (Malfunction code confirmed)
2 short beeps : Upper digit matched.
1 short beep : Lower digit matched.

- Press the MODE selector button. The right "?" (lower digit) indication of the malfunction code flashes.
- Malfunction code lower digit diagnosis Press the UP or DOWN button and change the malfunction code lower digit until the continuous malfunction code matching buzzer (*2) is generated.
 - The lower digit of the code changes as shown below when the UP and DOWN buttons are pressed.

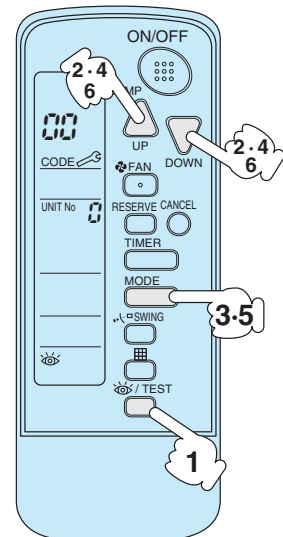

* Location of buttons is depend on model type.

